Manual NWA350

NWA350

2200Mbps Wireless ceiling Access Point

Version 3.0


March 2022

Niveo International BV 2022

How to login.

Default IP address: 192.168.2.200

Password: admin

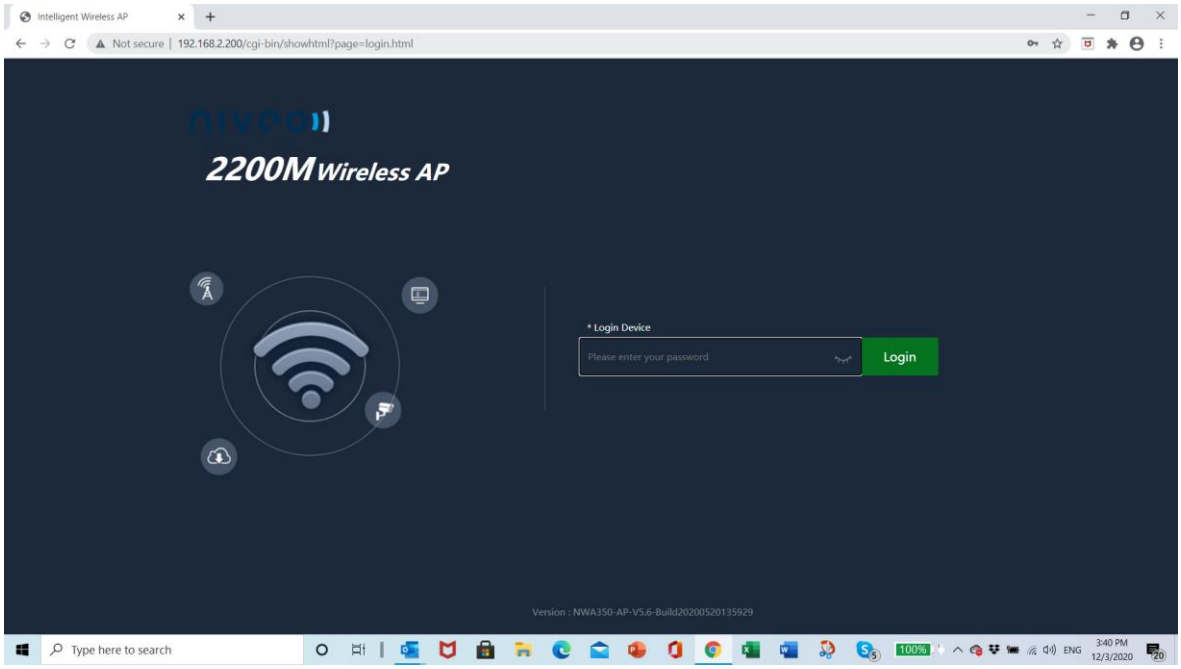


Choose AP mode

FAT AP mode: to work **without** AC controller


FIT AP mode: to work with AC controller

The NWA350 is by default set to FAT mode: working as a stand alone AP without controller!

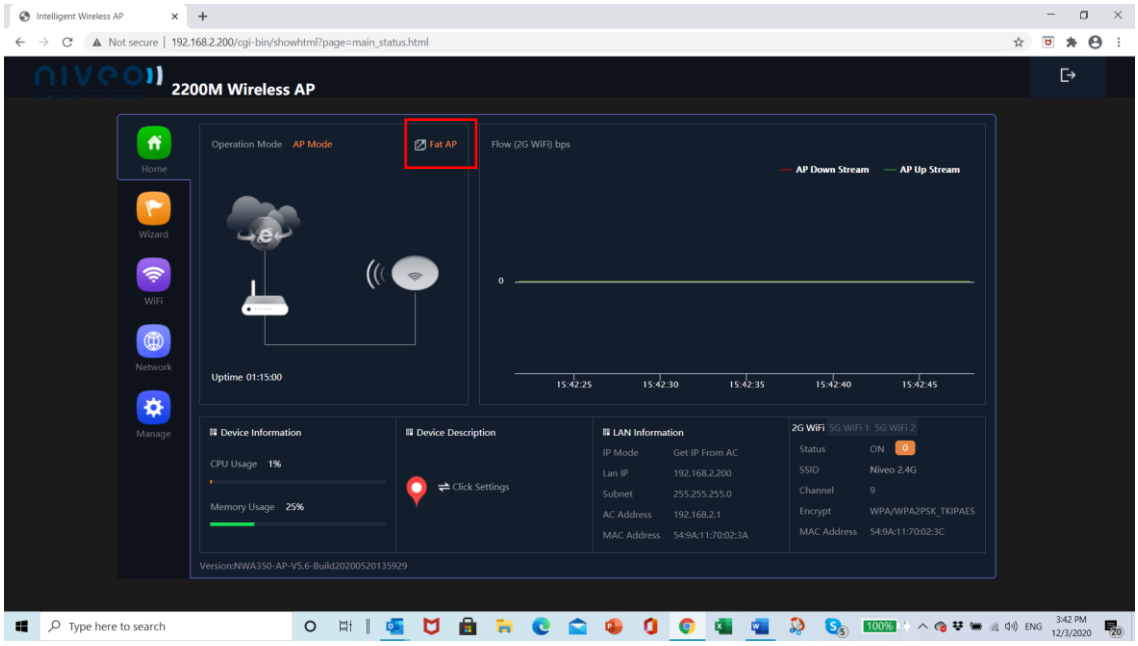

Change of operating mode FIT/FAT

Go to: 192.168.188.253/mode_switch.html

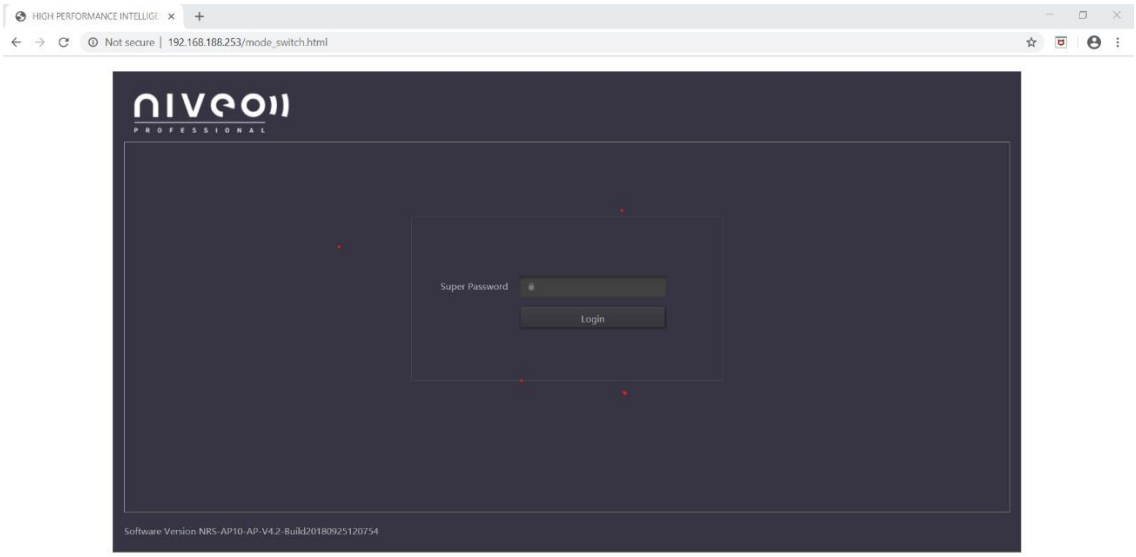

Superpassword: admin

Change mode for:

FIT AP: to work with controller


FAT AP: to work as standalone.

After selection AP will reboot.

Niveo International BV 2022


Wizard

AP mode

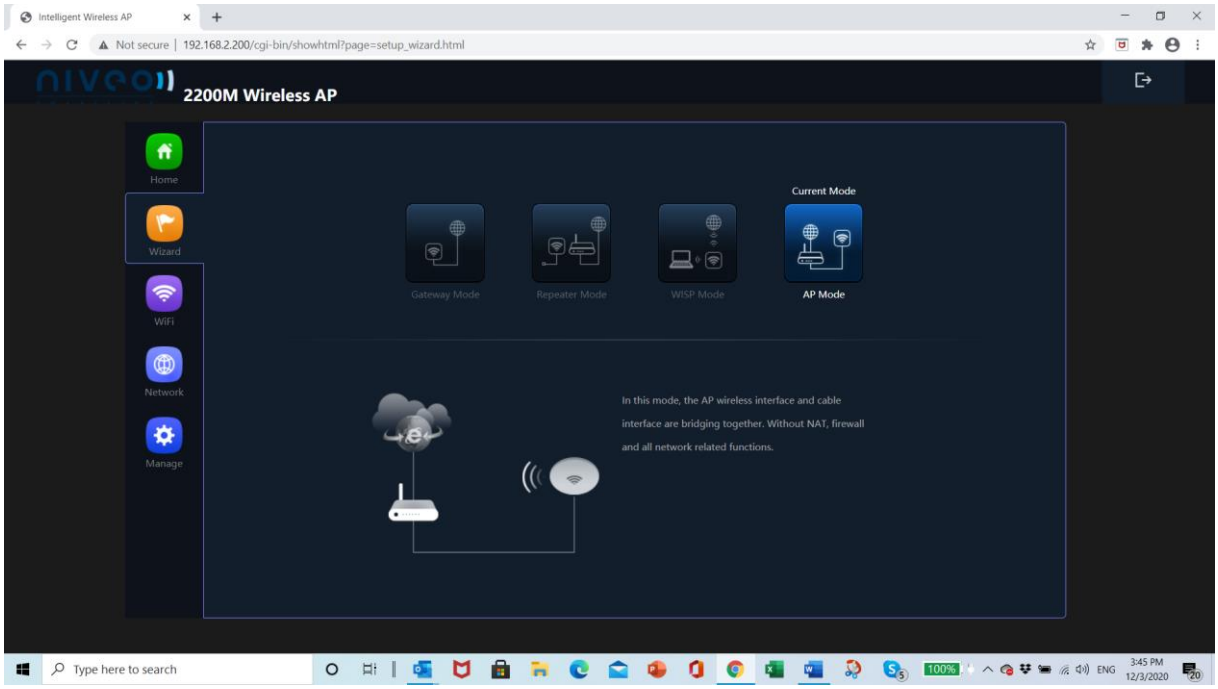


WISP mode

Choose bandwidth and set credentials

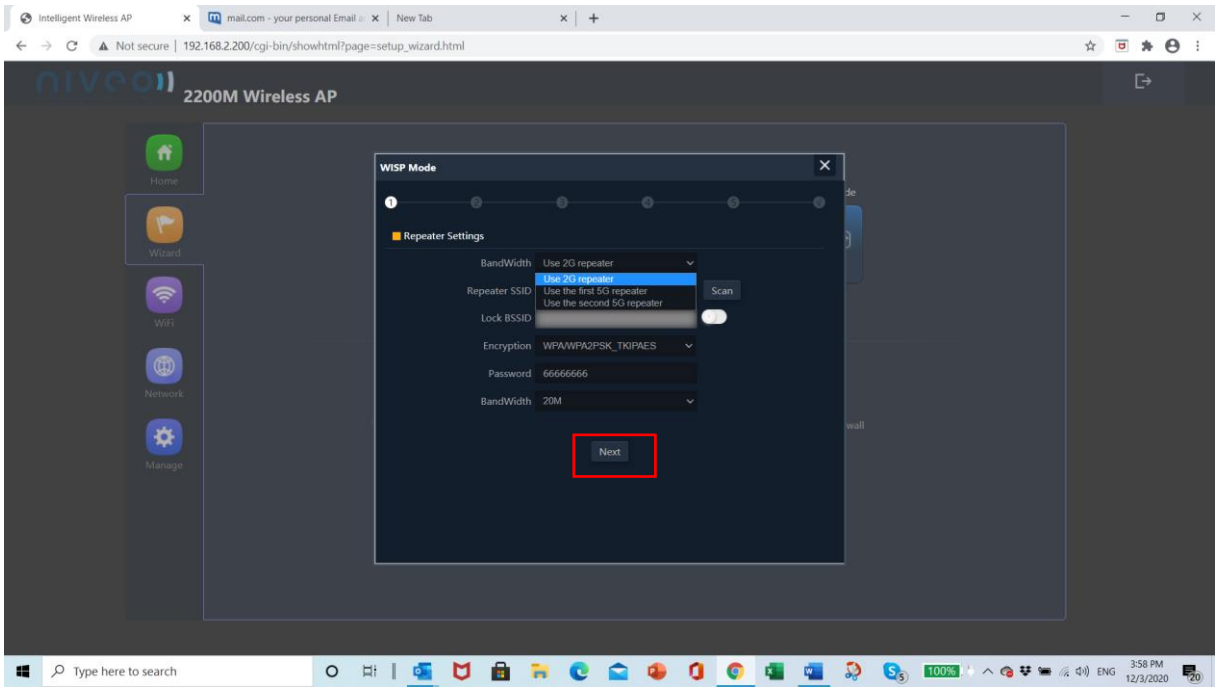

Repeater mode

Choose bandwidth and set credentials with next

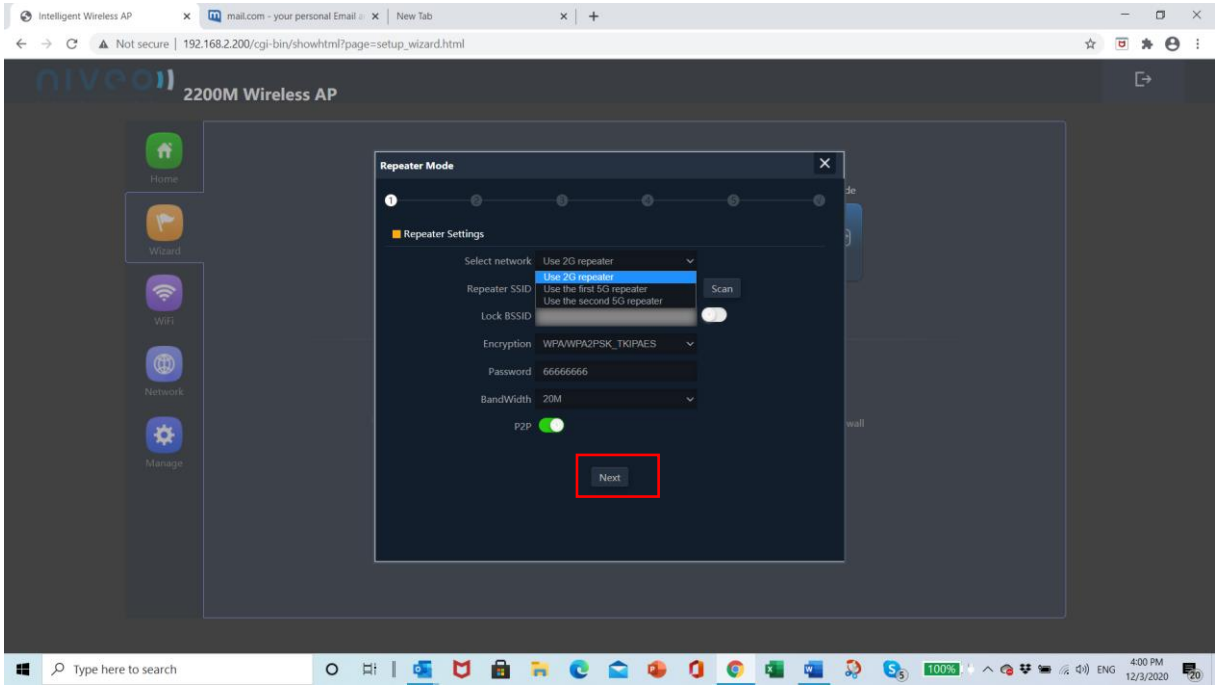

Gateway mode

Set Ip and set credentials with next

WiFi


WLAN settings

Set up Virtual APs at request. Set 2G,5G(2x) band

Analyze WiFi spectrum to see which frequencies are best to use.


Enable broadcast of SSID.

Set SSID, password and Apply

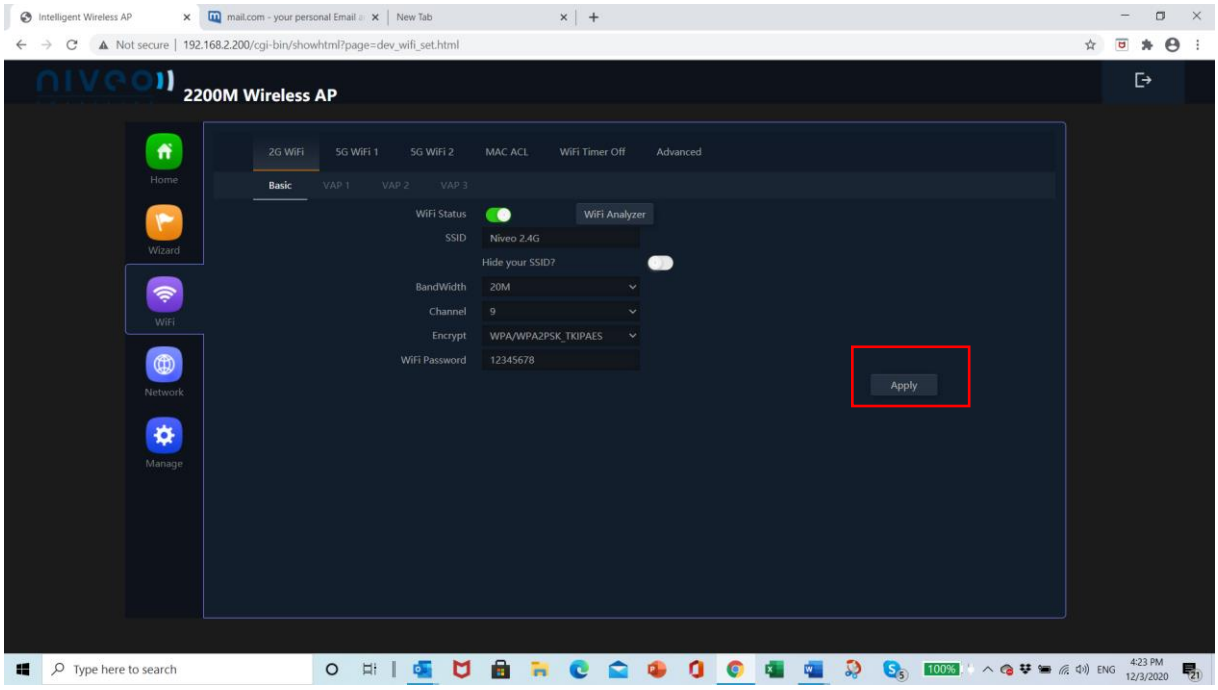


MAC ACL

Add MAC ACL

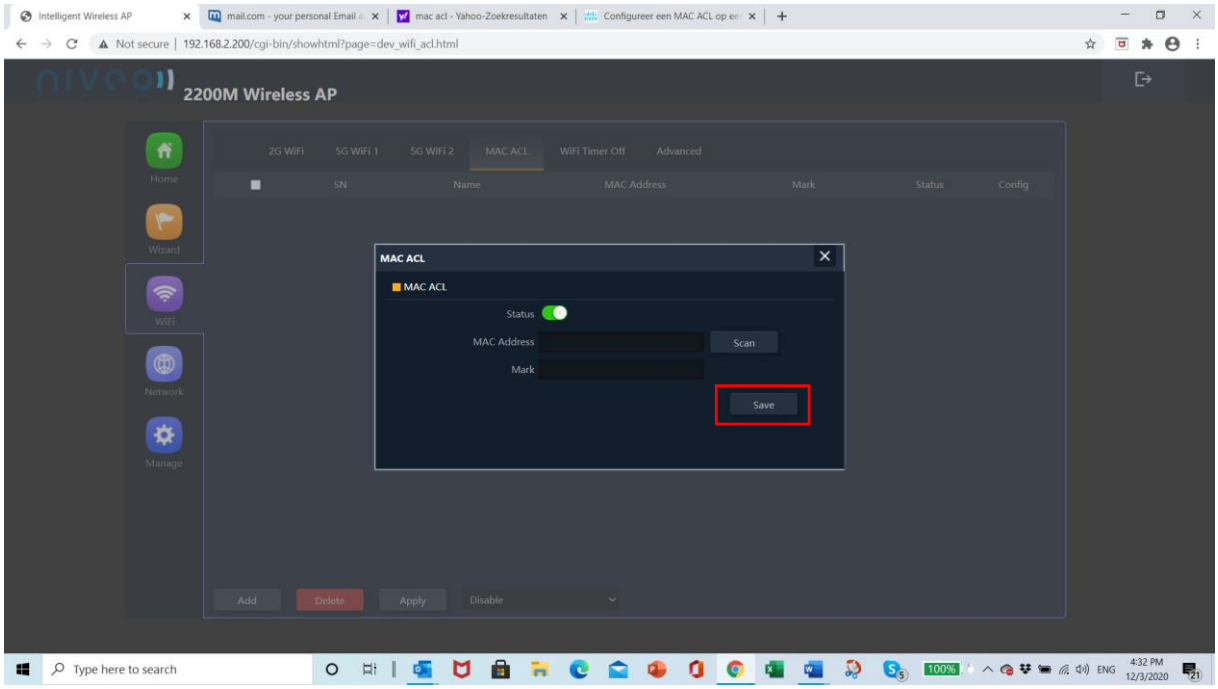


WiFi timer off

Set time period to disable WiFi

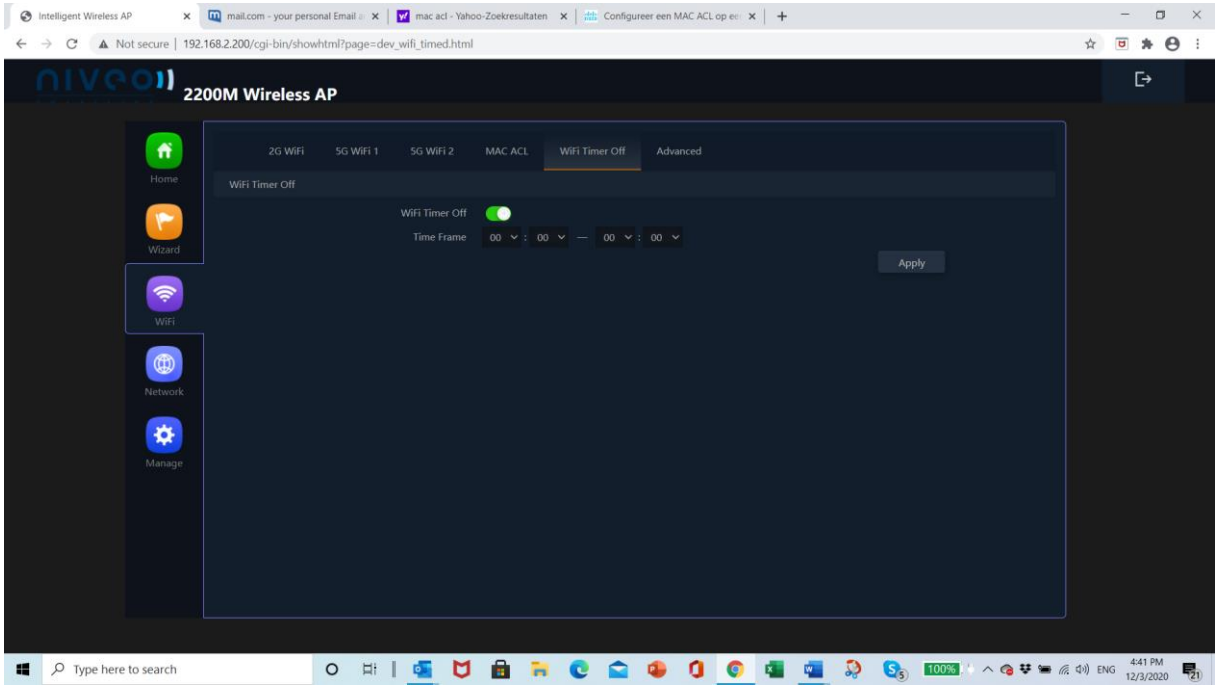

Advanced


Set advanced settings and thresholds

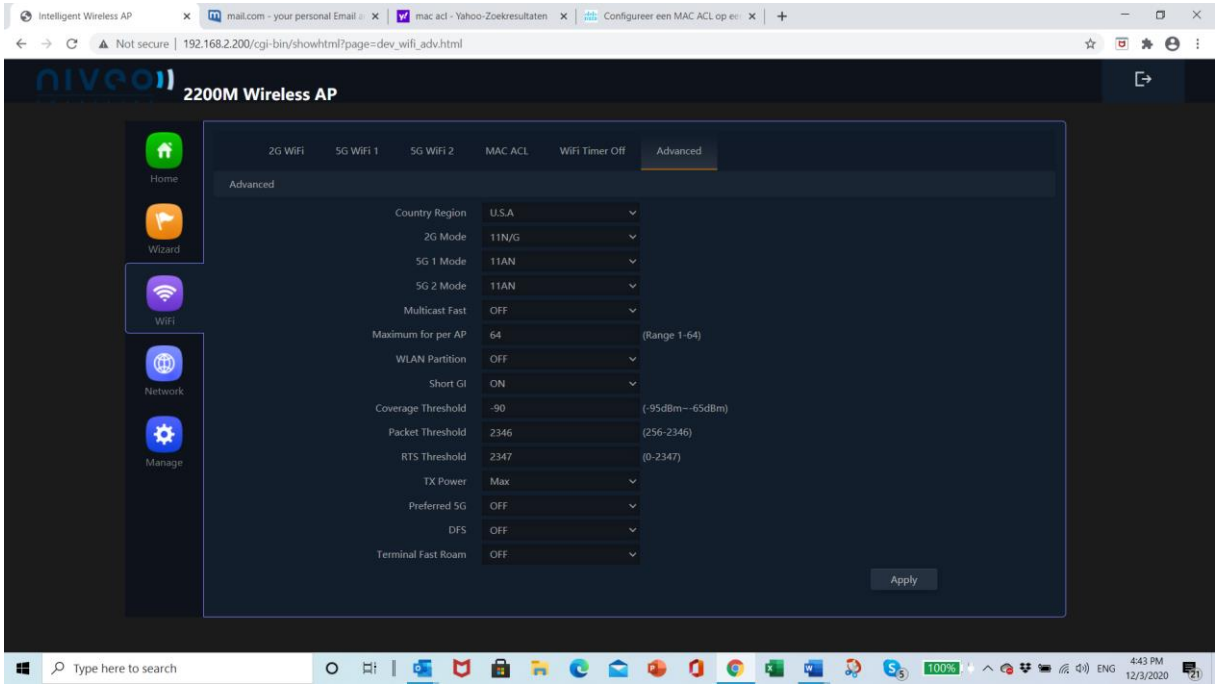

Network


LAN Settings

Set IP credentials

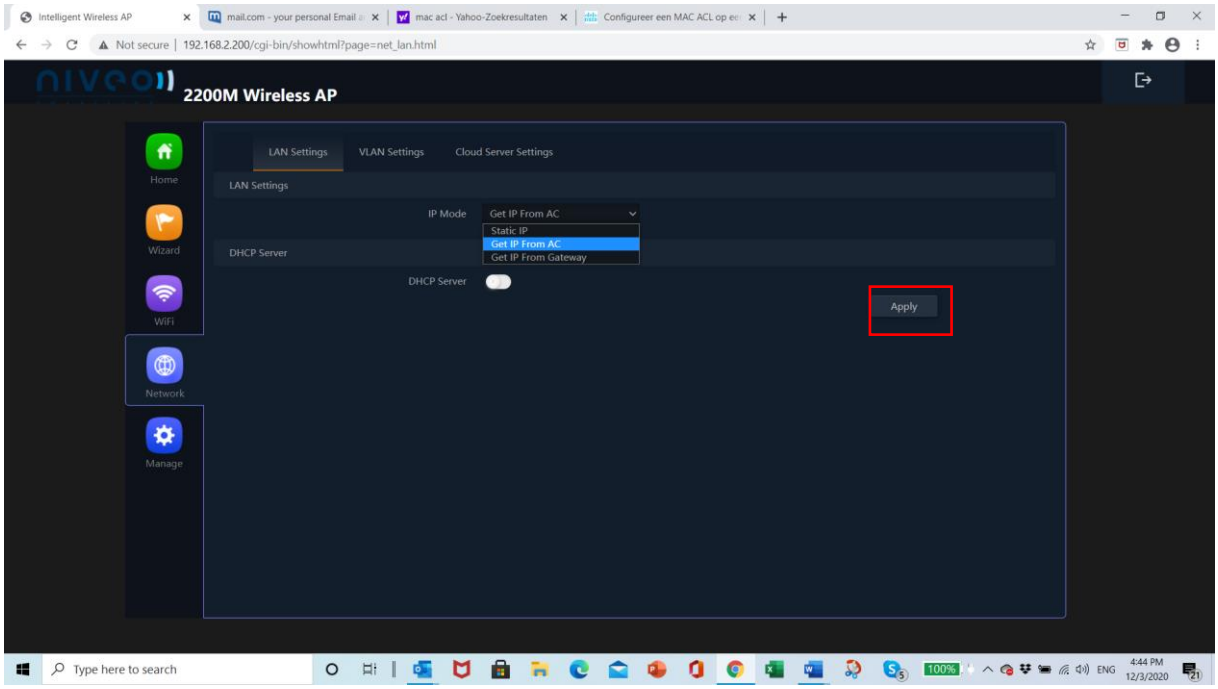


VLAN settings

Create VLAN ID Tags

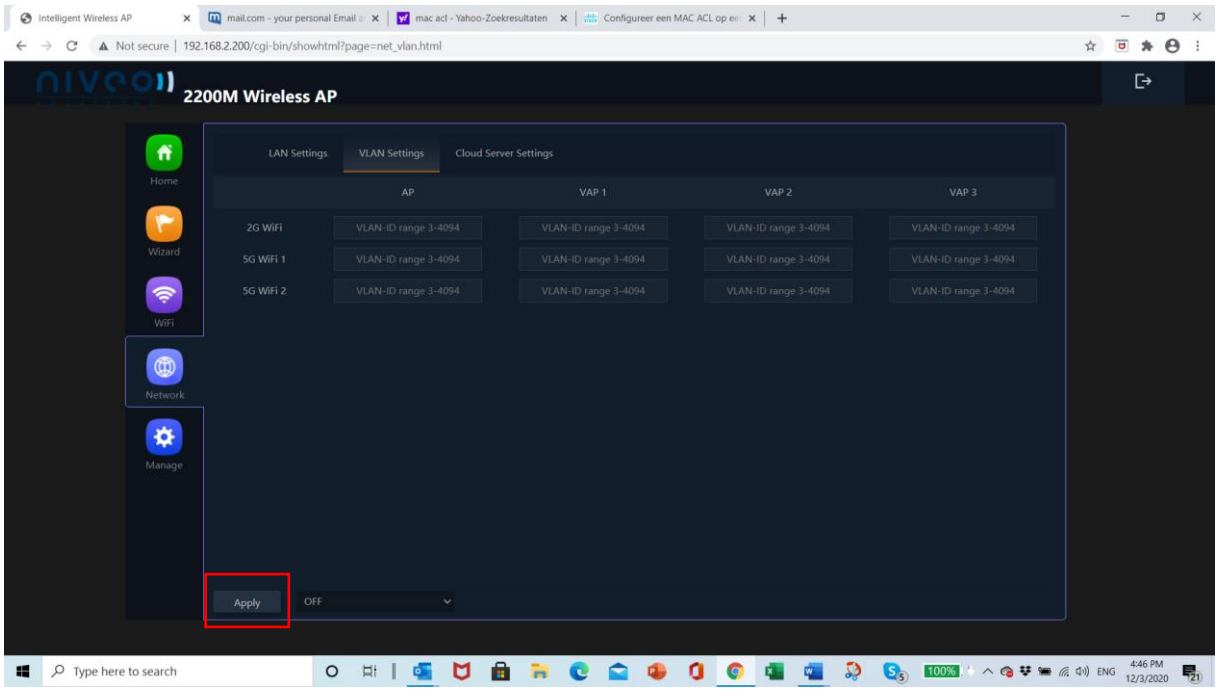


Cloud Server Settings

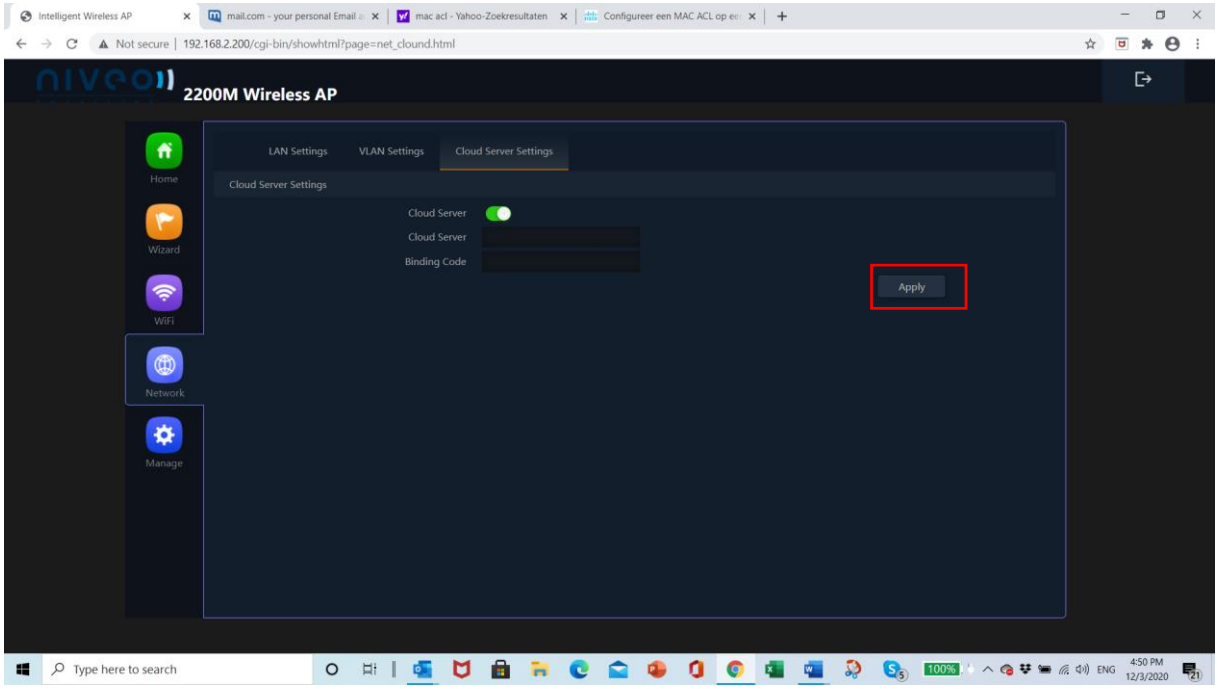

Manage


Configure

Save/upload configuration file

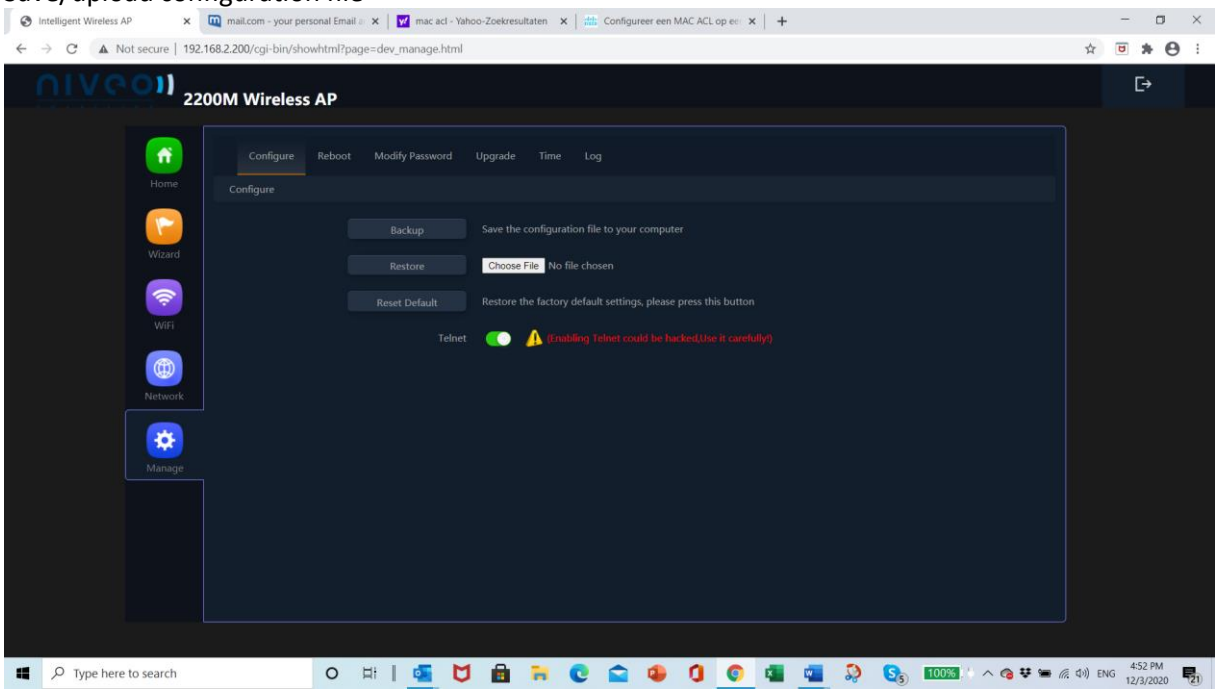


Reboot

Reboot AP or set a schedule daily rebooting of AP

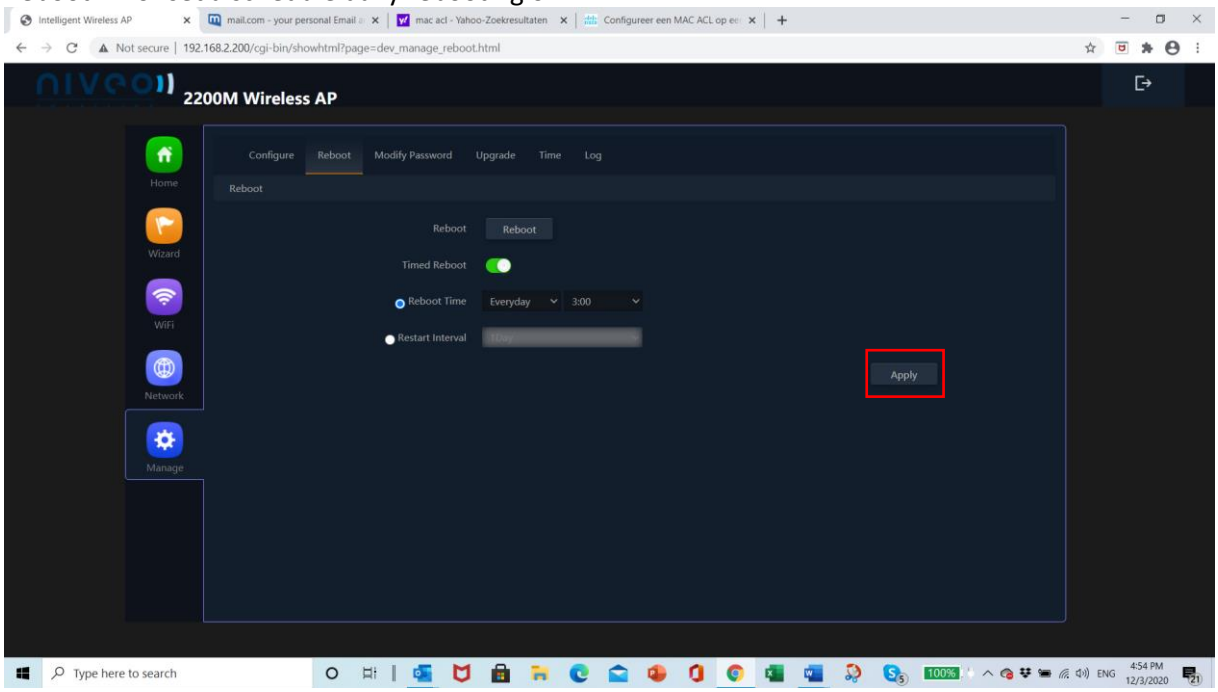


Modify Password

Modify default password of AP

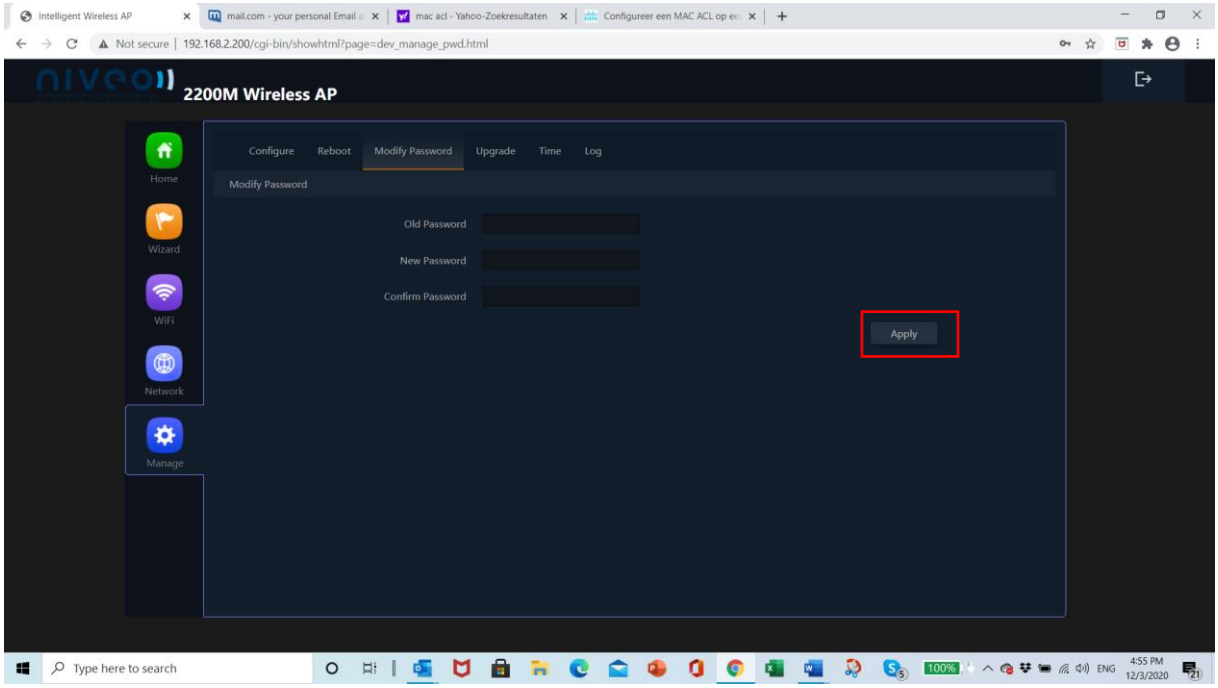


Upgrade

Upgrade firmware

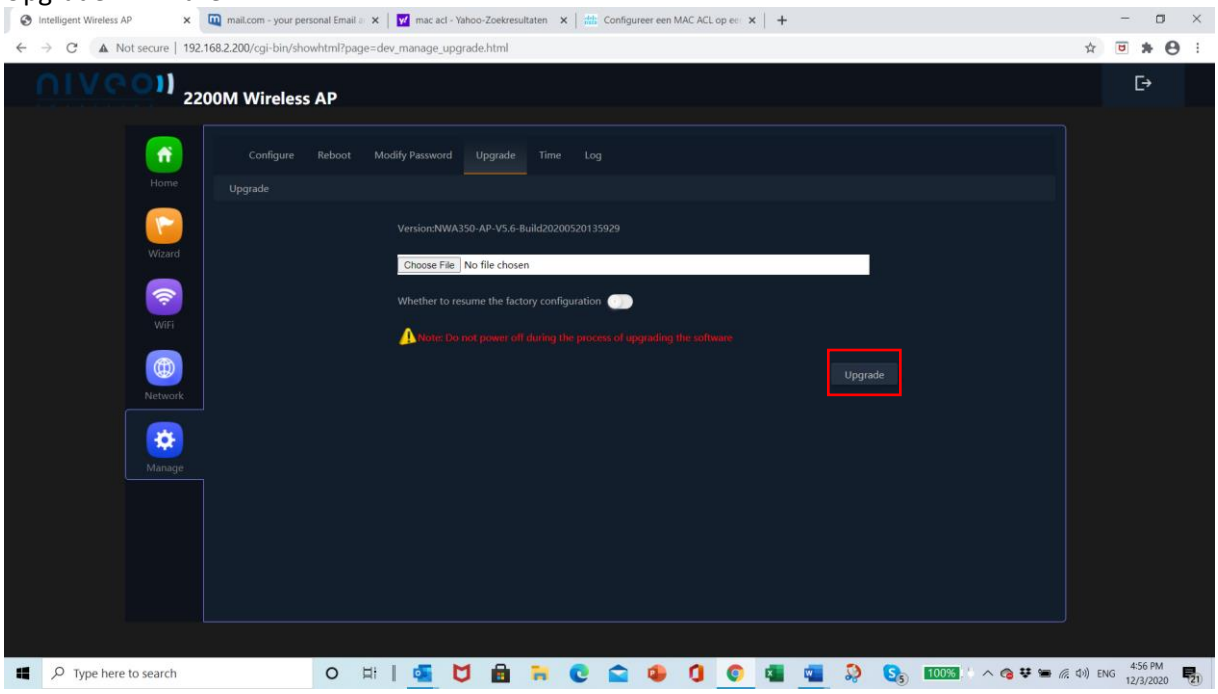

Time

Select time zone

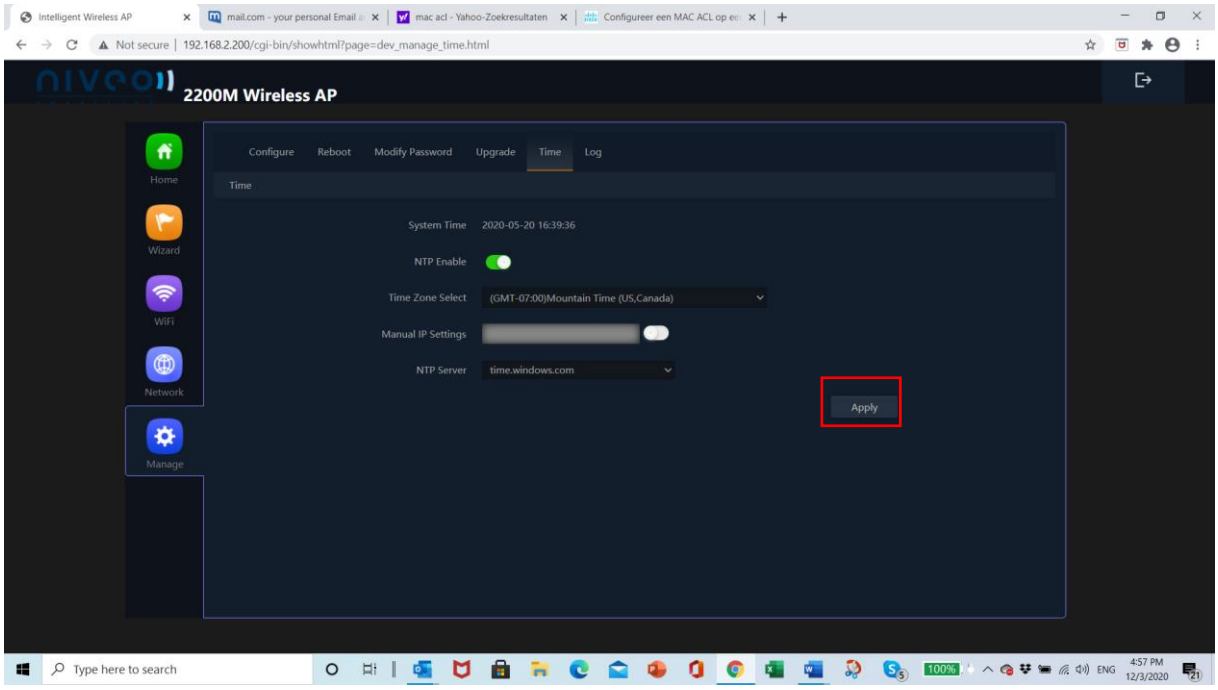

Log

Logfile and remote login

